



Model MC1950

McCULLOCH

Bagless Vacuum Cleaner!



by Top Innovations, Inc.

Any Questions?	
Let us answer any questions you may have about this product. Please call us at:	
Toll-Free 1-800-711-6617	
Se tienes alguna pregunta por favor llame a: 1-800-711-6617 La llamada es gratis	
customerservice@topinnovations.com	

**PLEASE READ THESE INSTRUCTIONS BEFORE USE
AND SEND IN YOUR WARRANTY REGISTRATION CARD**



LETTER FROM THE CEO

Congratulations on purchasing your **McCULLOCH®** Vacuum Cleaner. We hope it can make your cleaning experience faster and easier.

Top Innovations, Inc. takes pride in providing excellent quality products, affordable prices, and outstanding customer support.

We invite you to visit us at www.topinnovations.com or call (800) 711 6617 ext: 102 and/or 130. Our customer support team is available to answer any questions you may have about your new product.

Enjoy your **McCULLOCH®** Vacuum Cleaner!

A handwritten signature in cursive script, appearing to read 'Benny Lee'.

Benny Lee
Chairman and CEO
Top Innovations, Inc.

IMPORTANT SAFEGUARDS



WARNING: When using an electrical appliance, to reduce the risk of fire, electrical shock or injury the following basic safety precautions should always be followed:

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM

1. Do not leave the appliance unattended when plugged in. Unplug the unit from outlet when not in use and/or before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. Do not use the vacuum if it has been dropped, damaged, left outdoors, or dropped in water.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
7. Do not run appliance over cord; keep cord away from heated surfaces.
8. Do not unplug by pulling on cord. To unplug, grasp the plug, and gently remove from outlet.
9. Do not handle plug or appliance with wet hands.
10. Do not put any object into the suction intake opening that would block it. Do not use with any opening or air intake area blocked. Keep free of dust, lint, hair and anything else that may reduce the airflow.
11. Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
12. Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS



 
WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug, if it still does not fit, contact a qualified electrician to install a proper outlet. Do not attempt to modify the plug in any way.

13. Turn the vacuum to the “Off” position before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Look on your vacuum and follow all instructions printed on the machine.
17. This unit is designed for pick –up of dry matter. Do not attempt to vacuum liquids of any type or moist materials as this could create a situation that electrical shock could occur.
18. Use only extension cords UL or cUL-rated at 15 amperes. Extension cords rated less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be accidentally pulled or tripped over.
19. Keep the end of hose wands and other openings away from your face and body.
20. Do not use the vacuum cleaner without dust tank and filter in place.
21. Always turn off this appliance before connecting or disconnecting the vacuum hose.
22. Store the vacuum and its attachments indoors in a dry location.
23. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
24. Use only on dry, indoor surfaces.
25. Do not use for any purpose other than described in this user’s guide.

SAVE THESE INSTRUCTIONS



LEARN ABOUT YOUR VACUUM

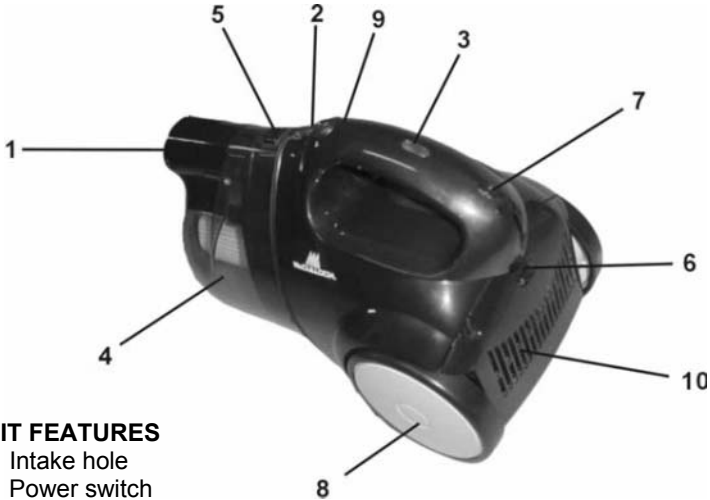

UNIT FEATURES

- 1. Intake hole
- 2. Power switch
- 3. Dust full indicator
- 4. Dust tank
- 5. Dust tank release button
- 6. Cord storage lock tab
- 7. Carrying handle
- 8. Rubber wheels
- 9. Shoulder strap attaching holes
- 10. Cord storage compartment

Model MC1950
120 Volts – 1200 Watts



PARTS INCLUDED

- 11. Hose
- 12. 2 extension wands
- 13. Floor brush
- 14. Crevice tool
- 15. Dust brush
- 16. Shoulder strap
- 17. Upholstery brush

**WARNING:**

Always unplug from electrical outlet before opening the dust tank.

A. Connect the hose.

Insert the hose (11) into the intake hole (1) on the top of the unit. To accomplish this, press the two buttons on the sides of the hose end. Then, insert the hose (11) end into the intake hole (1) until it clicks into the right position. To remove the hose (11), repeat the process and reverse by pulling the hose (11) from the intake

B. Attach the shoulder strap (16)

Attach the shoulder strap (16) in the holes located on top of the unit.

C. Remove cord from cord storage compartment (10)

Open the cord storage compartment by pulling the locking tab (6) at the rear of the vacuum cleaner, and take out the cord. When vacuuming is finished, disconnect the plug from electrical outlet, roll the cord up, and put it back into the cord storage compartment. (10)

D. Plug in

Pull out the cord from cord storage compartment (10) and insert it into an electrical outlet.

E. Turn the ON/OFF switch

After the plug is inserted into the electrical outlet, press the power switch (2) on the top of the vacuum cleaner to turn the unit on and off.





USING THE ACCESSORIES

 
Suction Control

The suction control switch permits you to reduce the suction power allowing for accessory replacement and/or usage on delicate fabrics.




Extension Wands (12) and Floor Brush (13)

Insert the small end on one wand into the circular fitting of the floor brush, then insert the small end of the wand into the first wand, and finally insert the hose handle into larger end of the second wand.

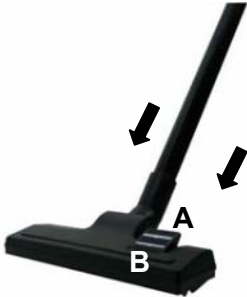

 Press the lever into position **(B)** for cleaning hard surface floors.
Press the lever into position **(A)** for cleaning carpets.

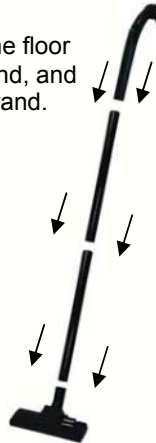

Connecting and Using the Accessories

Slip the circular end of desired accessory onto the hose handle and twist it slightly to ensure it is properly installed. If additional reach is needed, attach the one or both wands onto the hose handle first.



Dust Brush (15)

For furniture, lamps, ceiling fans, and fixtures.

Upholstery Brush (17)

For curtains, draperies, cushions, and other fabrics.

Crevice Tool (14)

For crevices, corners, baseboards, and between cushions.

Emptying Dust Tank

When the dust full indicator (3) turns red, it is time to empty your dust tank (4).

1. Turn the unit off.
2. Disconnect the hose (11) from the intake hole (1).
3. Remove the dust tank (4) by pushing the dust tank release button (5).
4. Remove the filter assembly.
5. Empty the dust tank (4).
6. Every time the dust tank (4) is emptied, to maintain high suction, it is recommended washing the filters in cold water and let it dry naturally. **IMPORTANT:** ensure it is totally dry before installing it back into the vacuum cleaner.





CHANGING AND CLEANING FILTER

 
Your vacuum cleaner contains three filters, which work together to reduce dust and allergens from escaping the vacuum and re-entering the air.

1. Ultra-Fresh Filter – traps air impurities efficiently and it is located inside the dust tank.
2. Charcoal Filter – reduces odors during cleaning process. It is located right behind the Ultra-Fresh Filter.
3. Exhaust Filter – ensures maximum filtration. It is located inside the cord storage compartment and does not need to be removed.



Filter Parts:

1. A950-001
2. A950-002

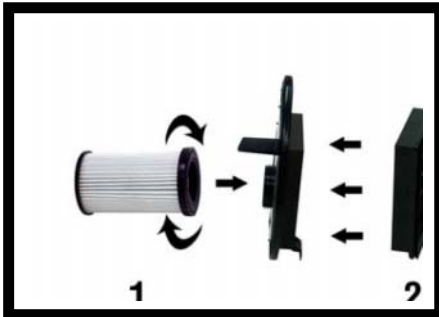



TROUBLESHOOTING GUIDE

McCULLOCH VACUUM CLEANER WILL NOT OPERATE	<ol style="list-style-type: none"> 1. Power cord may not be firmly plugged into outlet. 2. No power coming from outlet. 3. Unit may need service. 	<ol style="list-style-type: none"> 1. Firmly replace power cord into outlet. 2. Check fuse or breaker. Please note they may need replacement. 3. Be sure to contact Customer Service.
McCULLOCH VACUUM CLEANER HAS NO SUCTION OR WEAK SUCTION	<ol style="list-style-type: none"> 1. Dust tank not installed correctly. 2. Dust tank is full. 3. Filters are clogged. 4. Hose or nozzle passage clogged. 	<ol style="list-style-type: none"> 1. Replace dust tank until it snaps into place. 2. Empty the dust tank and clean the filter. 3. Clean and rinse with cold water, or replace filters. 4. Turn unit off and unplug it from outlet. Check for possible obstruction in the intake hole and/or in the accessories.
DUST ESCAPING FROM THE McCULLOCH VACUUM CLEANER	<ol style="list-style-type: none"> 1. Dust tank not installed correctly. 2. Dust tank is full. 3. Hose not installed correctly. 	<ol style="list-style-type: none"> 1. Read instructions for proper dust tank removal and replacement. 2. Empty the dust tank and clean the filter. 3. Read instructions for proper hose replacement.
FLEXIBLE HOSE AND ACCESSORIES NOT LIFTING DUST	<ol style="list-style-type: none"> 1. Hose is clogged. 2. Intake hole is obstructed. 3. Dust tank is full. 4. Filters are clogged. 	<ol style="list-style-type: none"> 1. Remove hose from unit and check hose for possible obstruction. 2. Remove hose and check intake hole. 3. Empty the dust tank. 4. Clean and rinse with cold water or replace filter. Call 1-800-711-6617 ext: 102/130

CUSTOMER SERVICE

BEFORE RETURNING ANY PRODUCT THAT IS DEFECTIVE:

1. Read the instructions in this manual
2. Read the Troubleshooting above
3. Contact our Customer Service at (800) 711-6617 ext. 102/130

NOTE: To ensure prompt and accurate service, call for a Return Authorization Number before returning any unit to Top Innovations, Inc. Failure to obtain a Return Authorization Number will cause a delay in warranty or out-of-warranty service requests.



CUSTOMER SERVICE

LIMITED WARRANTY

Top Innovations, Inc. will repair or replace, at its option, without charge to the consumer; any McCULLOCH® vacuum cleaner that fails due to a defect in material or workmanship within 3 months following the initial consumer purchase. This warranty does not cover damage caused by commercial use, misuse, alteration, or modification.

Performance of any obligation under this warranty may be obtained by returning the warranted vacuum, freight prepaid, with dated proof of the purchase to:

Top Innovations, Inc.
Warranty Service Department
400 NW Platte Valley Dr.
Riverside, MO 64150

If you have any questions about coverage under this warranty you may contact the Warranty Service Department by telephone (800) 711-6617 or email, customerservice@topinnovations.com.

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



Top Innovations, Inc.
400 NW Platte Valley Dr.
Riverside, MO 64150
Tel: (800) 711-6617
www.topinnovations.com



Printed In China