 




Model SF-222

**Quick & Easy™**  
**Steam Cleaner**

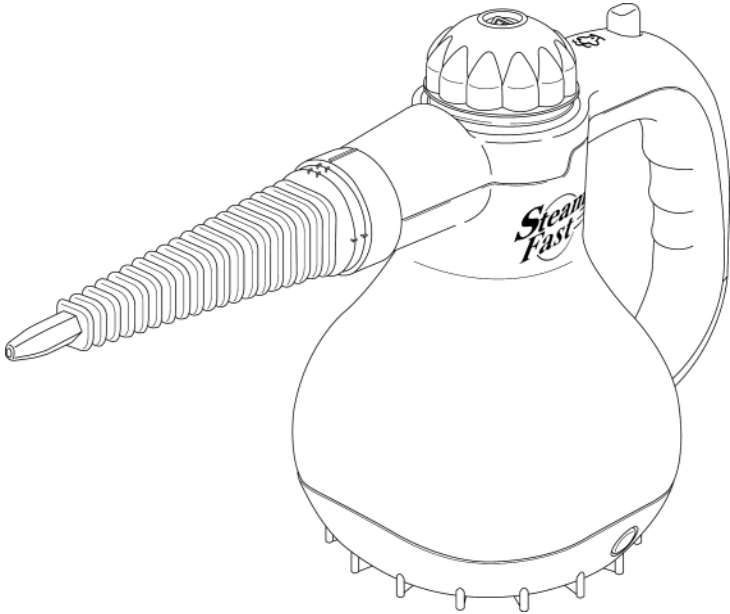

**by Top Innovations, Inc.**

**Please read instructions before use.  
Mail in your warranty registration card.**



## LETTER FROM THE CEO

**Dear Valued Customer,**

Thank you for purchasing the **Quick & Easy™** handheld steam cleaner. This versatile and convenient new product places the cleaning power of steam in a compact and lightweight appliance that is easy to take anywhere you need to clean.

Plug your **Quick & Easy™** in, and in minutes, you are ready to eliminate dirt, grease, grime, stains, and more from most anywhere in or around your home. In addition to removing dirt and grime, you will receive the many benefits that steam provides. Hot steam refreshes upholstery and eliminates smoke and other unpleasant odors, as well as dust mites and other allergens. Use it in your living room, kitchen, bedrooms, bathrooms, and anywhere else that you need to clean. And when you're finished steaming, the **Quick & Easy™** light weight and compact size make it quick and convenient to store.

Top Innovations, Inc. would like to invite you to take advantage of our Customer Support web site at:

[www.topinnovations.com](http://www.topinnovations.com)

On this website you will find additional information about many other exciting Steam Fast products that are available, helpful tips on ways in which you can utilize your **Quick & Easy™**, and other useful information to assist you in maximizing the power of steam!

Enjoy your new **Quick & Easy™**!

A handwritten signature in cursive script, appearing to read "Benny Lee".

Benny Lee  
Chairman and CEO  
Top Innovations, Inc.



## CUSTOMER SUPPORT

 
### CUSTOMER SUPPORT

For problems with your steam cleaner, refer to the Troubleshooting Guide Located on page 13 of this manual. Additional inquiries should be directed to our Customer Support services at 1-800-711-6617 ext. 102 / 130 or e-mailed to:

[customerservice@topinnovations.com](mailto:customerservice@topinnovations.com)

Should there be any missing or defective parts or accessories, contact Customer Support. In most cases, it is not necessary to return the entire unit. We can ship most parts directly to your door.

**To ensure prompt and accurate service, call for a Return Authorization number before returning any unit to Top Innovations. Failure to obtain a Return Authorization number will cause a delay in warranty or out-of-warranty service requests.**

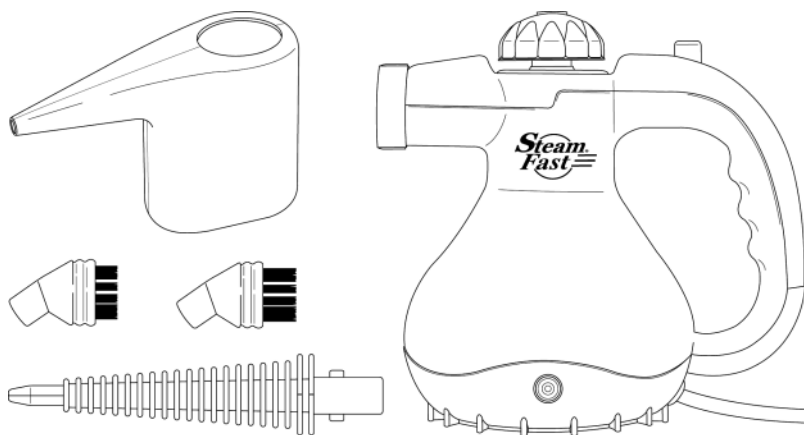




## IMPORTANT SAFEGUARDS



**WARNING:** To reduce the risk of fire, electrical shock, or injury, the following basic safety precautions should always be followed when using an electrical appliance.

### READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM CLEANER

1. DO NOT leave your SF-222 Quick & Easy™ unattended when plugged in or not in use.

2.  **This unit is not a toy. Close supervision is required when using unit near children, pets, and plants. Steam produced by it is hot and pressurized. Care must be taken to avoid burns or other injuries. Never point nozzle at pets or people.**

3. Always unplug electrical cord when unit is not in use. DO NOT use this unit if electrical cord or outlet is damaged. DO NOT use unit if it is not working properly or has been dropped, damaged, or left outdoors. If such damage occurs, return unit to an approved service technician for repair.

4. This unit is an electrical appliance. DO NOT submerge it in water. DO NOT use electrical cord as a handle. DO NOT allow cord to be crimped by closing it in doors. DO NOT pull or stretch cord around sharp corners or edges. Be sure to keep electrical cord away from all heated surfaces.

5. DO NOT use this unit with extension cords or electrical outlets that have inadequate current capacity. A three-prong outlet or a properly grounded adapter is necessary when using SF-222 Quick & Easy™.

6. In order to unplug SF-222 Quick & Easy™, grasp plug and pull smoothly and firmly from outlet. DO NOT attempt to unplug unit by pulling or tugging on cord.

7. DO NOT handle or use this unit while hands are wet or when not wearing shoes. To avoid falls and other injuries, be sure to dry any wet areas on floors and to stand away from damp surfaces while using steam cleaner.

## SAVE THESE INSTRUCTIONS!

FOR HOUSEHOLD USE ONLY



## IMPORTANT SAFEGUARDS



**WARNING:** To reduce the risk of electric shock, this appliance has a three-pronged plug. This plug will fit in a polarized wall outlet only one way. If the plug does not fit fully in the outlet, contact a qualified electrician to install a proper outlet. **DO NOT** attempt to modify the plug or defeat this safety feature in any way.

**8.** SF-222 Quick & Easy™ is only meant to be used with recommended SF-222 accessories. Other types of attachments such as those used with vacuum cleaners are not to be used with Quick & Easy. Doing so may cause injuries or damage to unit.

**9.** Nozzles and attachments become hot during use. To avoid injuries, **DO NOT** touch nozzles while using this appliance. **DO NOT** attempt to change attachments while unit is emitting steam.

**10.** **DO NOT** turn unit on its side when in use.

**11.** When filling your Quick & Easy™ with water, **DO NOT** overfill Water Reservoir.

**12.** Before filling unit with water, always take the following steps:

- (1) Turn appliance off
- (2) Unplug electrical cord

Failure to follow these steps may result in electric shock and injury.

**13.** Only water should be used in unit. Other cleaning agents will damage unit and can cause injuries.

**14.** **DO NOT** operate unit if steam opening is blocked. Should this occur, shut unit off and unplug.

**15.** Store your SF-222 Quick & Easy™ in a cool, dry place. Allow unit to cool completely, and always drain Water Reservoir before storing.

## SAVE THESE INSTRUCTIONS!

 
 
 
FOR HOUSEHOLD USE ONLY





# SF-222 QUICK & EASY™ PRODUCT INFORMATION

The following features and accessories come with your steam cleaner. Carefully inspect packaging material as some parts are shipped inside Styrofoam packaging. To obtain possible missing parts, refer to the **Customer Support** section on page 3 of this manual.

- UNIT FEATURES**
1. Water Reservoir Cap
  2. Steam Button
  3. Handle
  4. Grounded Power Cord
  5. Steam Ready Light
  6. Water Reservoir

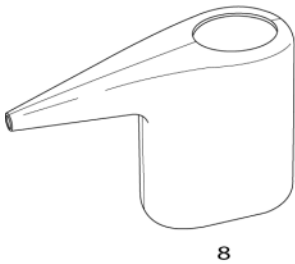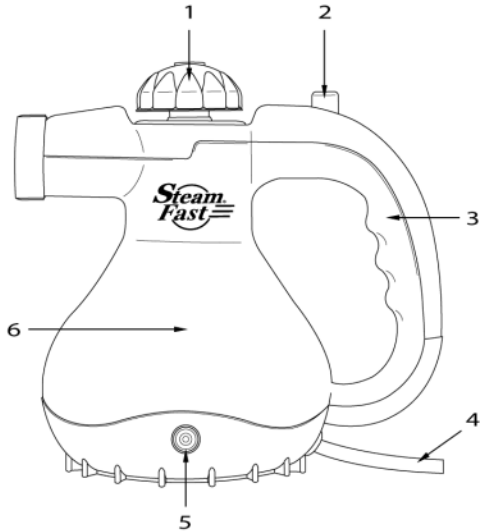

  
- UNIT ACCESSORIES**
7. Steam Jet Nozzle
  8. Measuring Cup
  9. 10 mm Nylon Utility Brush
  10. 15 mm Nylon Utility Brush





## SF-222 QUICK & EASY™ PRODUCT INFORMATION

 - The *Water Reservoir Cap* (1) securely covers the opening to the *Water Reservoir*, safely containing the pressurized steam within the boiler. The *Water Reservoir Cap* must be removed in order to fill the unit with water.
- The *Steam Button* (2) is depressed in order to release a spray of hot, penetrating steam from the unit.
- The *Handle* (3) is designed to stay relatively cool and safe while providing the optimum amount of user comfort.
- The *Grounded Power Cord* (4) provides a maximum amount of safety against electrical shock, while still allowing a great deal of freedom and mobility.
- The *Steam Ready Light* (5) illuminates to indicate that the boiler is heating, and deactivates when the unit is ready to begin steaming.
- The *Water Reservoir* (6) is the tank in which water is stored for use by the unit. There must be a sufficient amount of water in the *Water Reservoir* in order for the unit to function.
- The *Steam Jet Nozzle* (7) is the only accessory that is required at all times in order for the unit to function. It focuses the spray of steam, and serves as the base to which all other attachments connect.
- The *Measuring Cup* (8) is designed to assist you in consistently filling the unit with the optimum amount of water.
- The *10 mm Nylon Utility Brush* (9) and the *15 mm Nylon Utility Brush* (10) attach to the *Steam Jet Nozzle*, and provide extra power for removing exceptionally tough dirt and stains from surfaces.

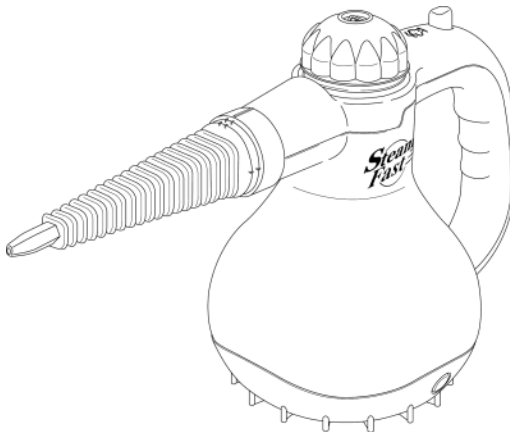

**WARNING:** Do not attempt to connect any attachments while unit is emitting steam.

## ATTACHING STEAM JET NOZZLE

1. Insert cylinder on back of Steam Jet Nozzle (FIGURE 1) into hole on face of main unit (FIGURE 2). Insert it so that two tabs on sides of cylinder (FIGURE 1-A) fit into two tab holes on sides of main hole (FIGURE 2-B). Be sure to push Steam Jet Nozzle in as far as possible.

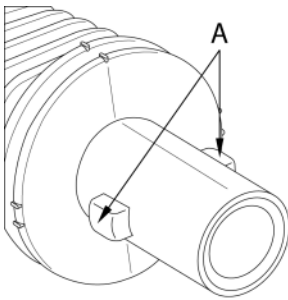 


FIGURE 1

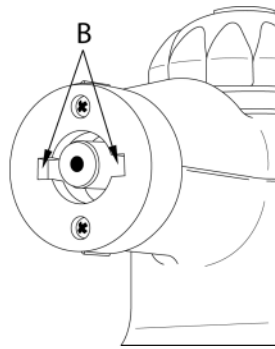 


FIGURE 2

2. Rotate Steam Jet Nozzle in a clockwise direction as indicated below (FIGURE 3). Twist until you feel it “lock” into place and it will move no further. Note that single guide line on top of main unit aligns between dual guide lines on Steam Jet Nozzle (FIGURE 4).

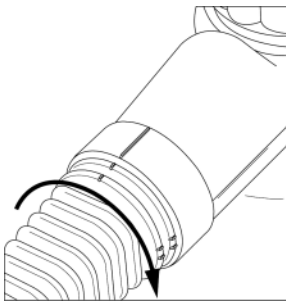 


FIGURE 3

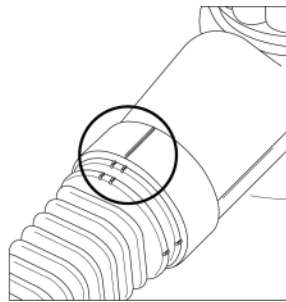 
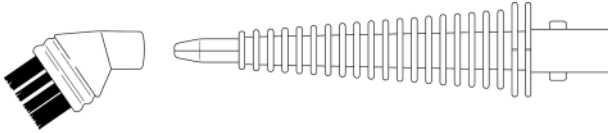 


FIGURE 4



**ATTACHING UTILITY BRUSHES**

1. Both the 10 mm Nylon Utility Brush and 15 mm Nylon Utility Brush are attached in the same manner. Begin by aligning hexagonal-shaped hole on back of desired brush with the hexagonal tip of the Steam Jet Nozzle (FIGURE 5).

**FIGURE 5**

2. Firmly press Nylon Utility Brush onto tip of Steam Jet Nozzle (FIGURE 6).

**IMPORTANT:** Make sure brush is pushed as far as possible onto tip to ensure that it is properly set in place and space between Nylon Utility Brush and Steam Jet Nozzle is sealed (FIGURE 7). This prevents heated steam from escaping and causing injury.

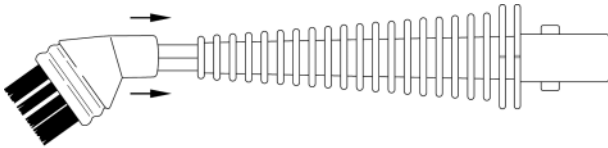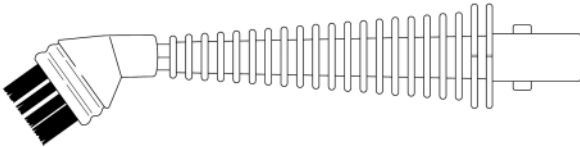  **FIGURE 6****FIGURE 7**

3. To remove Nylon Utility Brush, **make sure unit is unplugged and has had sufficient time to cool down.** Then simply grasp brush and firmly pull until it disconnects from Steam Jet Nozzle.



## USING THE QUICK & EASY™

### FILLING QUICK & EASY™ WITH WATER

1. Place Quick & Easy™ on a flat, level surface.
2. Make sure power cord is unplugged from electrical outlet.
3. Press and hold Steam Button to ensure that any remaining steam has been emitted from unit.
4. While still depressing Steam Button, cautiously unscrew and remove Water Reservoir Cap.

**CAUTION:** Always press Steam Button while unscrewing Water Reservoir Cap. This ensures that any steam inside unit will be safely vented out of nozzle.

5. Allow unit to cool for at least 3 minutes.

**WARNING:** Always allow unit to cool before adding water. Cold water added to a hot boiler may cause hot water and steam to shoot out of fill hole.

6. Remove Water Reservoir Cap and empty any water remaining in Water Reservoir from previous use.

**CAUTION:** Emptying unit before filling ensures that proper amount of water is added. Too much water may cause excess water in steam and could damage unit.

7. Fill Measuring Cup to maximum fill line with water (6 oz.)

**NOTE:** To prolong lifetime of Quick & Easy™, we recommend using distilled or de-mineralized water.

8. Carefully pour water from Measuring Cup into Water Reservoir through fill hole.

**WARNING:** Extreme caution should be used when pouring water into boiler. Do not look directly down fill hole when filling. Keep your free hand and any children or pets at a safe distance.

9. Replace Water Reservoir Cap, using caution not to over tighten it.



## USING THE QUICK & EASY™

### OPERATING QUICK & EASY™

**NOTE:** Be sure that Water Reservoir has already been filled and desired attachments are connected before following these steps.

1. Plug power cord into a convenient electrical outlet. Steam Ready Light will immediately illuminate. (Note: Steam Ready Light is illuminated while boiler is heating. This unit has no On/Off power switch.)

**CAUTION:** This unit uses a grounded (3-prong) electrical plug. Use only in properly installed 3-prong electrical outlets. Do not attempt to alter plug or circumvent this safety feature in any way.

 
2. Steam Ready Light will deactivate in 3-4 minutes, indicating that boiler is heated and Quick & Easy™ is ready to begin steaming.
3. Direct Steam Jet Nozzle (and any attachments) towards surface you desire to steam, and press Steam Button.

**CAUTION:** Always be sure that Steam Jet Nozzle and any other attachments are pointed in a safe direction (away from yourself, other people, pets, and plants) before pressing Steam Button.

4. Keep Steam Button depressed for a constant stream of steam. Using a slight back-and-forth motion over the area you are steaming will further enhance the cleaning process.

**NOTE:** During use Steam Ready Light may illuminate. This is normal. If you notice a drop in steam pressure, release Steam Button until Steam Ready Light deactivates once again.

5. Once steaming task is complete, immediately unplug power cord from electrical outlet. Follow steps under **Proper Storage** procedure on page 12 of this manual.

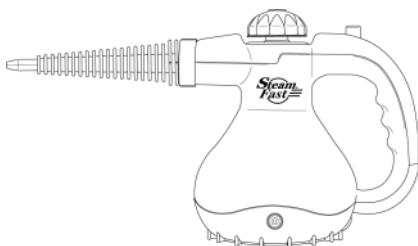



## CARE AND STORAGE GUIDELINES

### PROPER STORAGE

Preparing your Quick & Easy™ for storage is quick and simple. When you have finished your steaming tasks, follow the steps listed below:

1. Unplug power cord from electrical outlet.
2. Allow unit to cool completely (at least 30 minutes).
3. Remove all attachments from unit.
4. Drain any remaining water in Water Reservoir into a sink or tub to prevent overflowing during your next use. Flush out Water Reservoir with fresh water to minimize potential mineral buildup in Water Reservoir.
5. Store all attachments safely away, preferably near Quick & Easy™.
6. Store Quick & Easy™ in a cool, dry location.

### REMOVING MINERAL BUILD-UP

One common problem with steam appliances is mineral build-up caused by high mineral content in many municipal water supplies.

 
**The best way to avoid this is to use de-mineralized or distilled water in unit.**

If you are unable to use de-mineralized or distilled water, we recommend you use this procedure monthly to help avoid mineral build-up:

1. Unplug power cord from electrical outlet and allow unit to completely cool.
2. Remove all attachments from unit.
3. Remove Water Reservoir Cap and drain Water Reservoir into sink or tub.
4. Using Measuring Cup, make a mixture of 3 oz. vinegar and 3 oz. water.
5. Slowly pour water-vinegar solution into Water Reservoir.
6. Allow to stand for 40 minutes.
7. Drain water-vinegar solution from Water Reservoir.
8. Rinse Water Reservoir with fresh water and drain until vinegar odor dissipates.
9. Replace Water Reservoir Cap.

# TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit fails to heat up.	Steamer is not plugged in.	Plug into electrical outlet.
	Household Circuit Breaker / Ground Fault Interrupter has tripped or blown a fuse.	Reset Circuit Breaker / Ground Fault Interrupter, or replace fuse. If you need assistance, contact a qualified electrician.
Unit heats up, but fails to steam.	Mineral buildup in unit.	Follow <b>Removing Mineral Buildup</b> procedure on page 12 of this manual.
	Water Reservoir is empty.	Refill Water Reservoir using procedures on page 10 of this manual.
Steam output is intermittent.	Mineral buildup in unit.	It is normal for unit to periodically stop steaming for a few seconds. If steam stays off for longer periods, follow <b>Removing Mineral Buildup</b> procedure on page 12 of this manual.

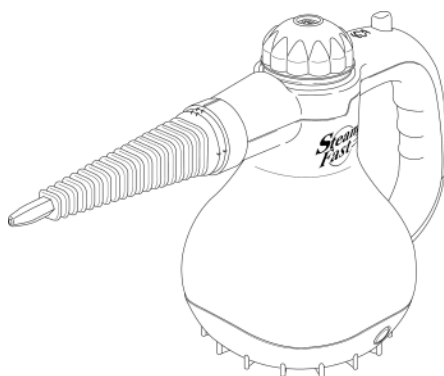

## ACCESSORY ORDER FORM

PART	PART DESCRIPTION	PRICE (FOR 1)	PRICE (FOR 4)	QTY.	TOTAL
A222-001	SF-222 Steam Jet Nozzle	\$3.99	\$11.96		
A222-002	SF-222 Measuring Cup	\$1.99	\$3.96		
A222-003	SF-222 10mm Nylon Utility Brush	\$2.99	\$7.96		
A222-004	SF-222 15mm Nylon Utility Brush	\$2.99	\$7.96		
<b>Subtotal</b>					
<b>+ Shipping &amp; Handling</b>					\$3.99
<b>Total USD</b>					

**ORDER ONLINE TODAY**  
 To try our convenient and totally secure online ordering service, visit us at [www.topinnovations.com](http://www.topinnovations.com).

**Method of Payment (no C.O.D. orders)**

Check or Money Order (payable to Top Innovations)

Charge to my  VISA  MASTERCARD

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

ACCOUNT NUMBER

--	--	--	--

EXPIRATION DATE

SIGNATURE: \_\_\_\_\_

(Full name as shown on account)

NAME: \_\_\_\_\_

MAILING ADDRESS: \_\_\_\_\_

TELEPHONE: \_\_\_\_\_

**TO ORDER:**

ONLINE  
 Visit our website at [www.topinnovations.com](http://www.topinnovations.com)

BY MAIL  
 Fill out this form and return to address on back of this manual

BY PHONE  
 (800) 711-6617  
 EXT. # 102/130

BY FAX  
 (816) 584-9066



## WARRANTY INFORMATION

### ONE YEAR LIMITED WARRANTY

(If outside USA, additional shipping charges may apply)

Top Innovations, Inc. warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty does not cover damage caused by misuse, negligence, use by improper current or voltage, use contrary to operating instructions or disassembly, repair or alteration by any person other than Top Innovations, Inc. Warranty Service Department.

Top Innovations, Inc. will repair or replace, at its option. This warranty gives you specific legal rights and may have other rights, which may vary from state to state.

Performance of any obligation under this warranty may be obtained by:

1. Call (800) 711-6617 for Return Authorization Number before returning for repair
2. Include copy of purchase receipt
3. Include your name, address, telephone number, and Return Authorization Number on returned package

Please send product postage prepaid to:

TOP INNOVATIONS, INC.  
WARRANTY SERVICE DEPARTMENT  
400 NW PLATTE VALLEY DR.  
RIVERSIDE, MO 64150

After 1 year limited warranty has expired, you will be advised of the cost of repair before any servicing is done unless you enclose a note indicating that you would like us to proceed with repairs.

If you have any questions about coverage under this warranty, you may contact warranty service department by telephone at (800) 711-6617 ext. 102 / 130 or e-mail [customerservice@topinnovations.com](mailto:customerservice@topinnovations.com)



**Top Innovations, Inc.**

400 NW Platte Valley Dr.

Riverside, MO 64150

Tel: (800) 711-6617

[www.topinnovations.com](http://www.topinnovations.com)

[customerservice@topinnovations.com](mailto:customerservice@topinnovations.com)



Printed In China